

LED Controller for MG-Wave

MLEK-A120W2LR


INSTRUCTION MANUAL

- Table of Contents -

Table of Contents	13	4. Connections	17
1. Introduction	13	External Signal Connector	17
Precautions for Correct Use	14	Connector for Illuminator	19
Warranty	14	5. Maintenance	19
Confirming Package Contents	15	Troubleshooting	19
2. Features	15	6. Specifications	20
3. Installation	16	Optional Items	21
Basic System Configuration	16	Dimensions	22
Equipment Control	16	7. Others	23
Installation	17	《Appendix》	24

1. Introduction

Please read this instruction manual carefully, before starting operation. Keep this book for the whole product lifetime, and store it in a place easily accessible.

Meanings of Warning Symbol		The following warning symbol is used in this manual. Be sure to fully understand the contents of the warning.
	WARNING	This warning marking indicates a potentially hazardous situation, which can result in hazard to the operator or damage to the unit, if the directions of this Instruction Manual are not followed.

Precautions for Correct Use



WARNING

Use this product only after understanding contents of the following:

- If using this product in combination with other apparatuses, please confirm the correctness/compatibility of the connection with these external apparatuses (especially regarding insulation requirements).
- If using this product in combination with other apparatuses, please confirm any standards, codes, or regulations that apply to the combination of the apparatuses.
- If using this product in combination with other apparatuses, please confirm that installation, connection and use within the entire system is according to the specification of this product (as described in this Instruction Manual) and according to those of all other apparatuses.
- Never use the product for an application involving serious risks to life or property as long as the whole system is not equipped with appropriate safety measures of the relevant safety category.
- Please install this product in such a way that water cannot sprinkle into it.
- Whenever some matter/dirt stuck to the product, please completely wipe it off, using a dry cloth.
- This product needs periodical inspection and exchange of maintenance parts.
- Whenever trouble occurs, please request repair to MORITEX, and do not dismantle the product by your own.

Other precautions

- When a customer wants to scrap the product, the whole equipment has to be disposed as industrial waste, according to laws and ordinances of the customer's area.
- Dimensions and Weights are reference.
- Specifications of the product (or accessories or optional items) may be changed at any time based on improvements and other reasons without any notice.
- Please inquire to MORITEX about indistinct contents.

Warranty

The term of a warranty

The warranty of this product lasts for two years from the date of purchase. In case of product failure within two years from the date of purchase, and there is no doubt on the correct utilization of the product, according to this instruction manual the unit will be repaired at no charge.

Limitations of warranty

When inconvenience due to our responsibility occurs to a product during the warranty period, the part that has trouble will be changed to a new part, or repaired, free of charge. But, if the cause of the trouble fits to the following, the product is out of warranty.

- The cause of the trouble is of such technical nature that could not be foreseen at the time of shipment.
- The trouble is not caused by this product.
- The trouble is caused by modification or repair by a person other than MORITEX.
- The trouble is caused by unauthorized use, not conforming to this Instruction Manual.
- The trouble is caused by the inappropriate handling such as a drop or a shock.
- The trouble is repaired by MORITEX at on-site service.
- The trouble is caused by a condition out of our responsibility such as a natural disaster or pollution.
- The cause of the trouble cannot be identified by MORITEX.

MORITEX shall not be responsible for indirect or consequential damages, in any way related to this product. The responsibility of MORITEX for any act shall not exceed the price of this product. The warranty is limited to business and use in Japan. Please inquire to MORITEX about warranty overseas.

Confirming Package Contents

Part name	Quantity	Unit	Notes
Main body	1	piece	—
Power Supply Cord Set	1	piece	※1,2
Caution Manual	1	book	—

※1 『MC-AC100A-2.0M』 is attached to 『-100V』 model. 『MC-AC200A-2.0M』 is attached to 『-200V』 model. (It depends on the suffix of the model that was purchased.)

Before connection to the power supply, please check the conformity of the specifications of the Power Supply Cord Set with the laws and standards of your country as well as the correct power and temperature rating.

Refer to Page 17: Installation, Page 20: Specifications, Page 21: Optional Items

※2 An attached AC cord set is an AC cord set for exclusive use of this product. Other than this product, please do not use it.

2. Features

Applicable Illuminators

Requirements for applicable MG-Wave Illuminators (made by MORITEX)

※1,2

Illuminator of up to 1.2 [A] /4pin

Output

Number of output channels: 2 channels

※ Each output channel is controlled separately.

Manual illuminance adjustment function

It is possible to adjust the illuminance of the Illuminator by using the Output Control SW on the front-panel.

※ It is possible to control each channel separately.

※ Manual adjustment of the illuminance is possible when selecting MANU mode (MANU/REMO SW)

※ Hexadecimal control: 0,1,····,E,F

※ (COARSE, FINE): (0,0) = MIN; (F,F) = MAX

※ Range between (0,0) and about (0,5) does not turn on the Illuminator.

Remote illuminance adjustment function

It is possible to adjust the illuminance of the Illuminator by inputting an EXT_0-5V analog voltage or EXT_VR signal (0-2.5V / at using 2.5Vref) to the External Signal Connector on the rear-panel.

※ It is possible to control each channel separately.

※ Remote adjustment of the illuminance is possible when selecting REMO mode (MANU/REMO SW)

※ Input 0V: MIN, Input 5V or 2.5V (2.5Vref): MAX

※ It is possible to change EXT_0-5V or EXT_VR by inputting a signal to the External Signal Connector.

Output ON/OFF function

It is possible to turn off the Illuminator by inputting a relevant signal to the External Signal Connector.

※ It is possible to control each channel separately.

※ Operation of this function is possible regardless of the MANU/REMO setting.



WARNING

※1 Do not connect anything to output except designed Illuminator.

※2 Please never exceed specified current values.

3. Installation


Basic System Configuration

- This Unit is dedicated for use with/for connection to the MG-Wave Illuminator.
- For external control, it is possible to connect an external apparatus via the External Signal Connector.



※ The cables for connection to the EXT Connector and to the Illuminator are supplied as Optional Item (MC-EXC-02, M-RCB4**L).

Equipment Control

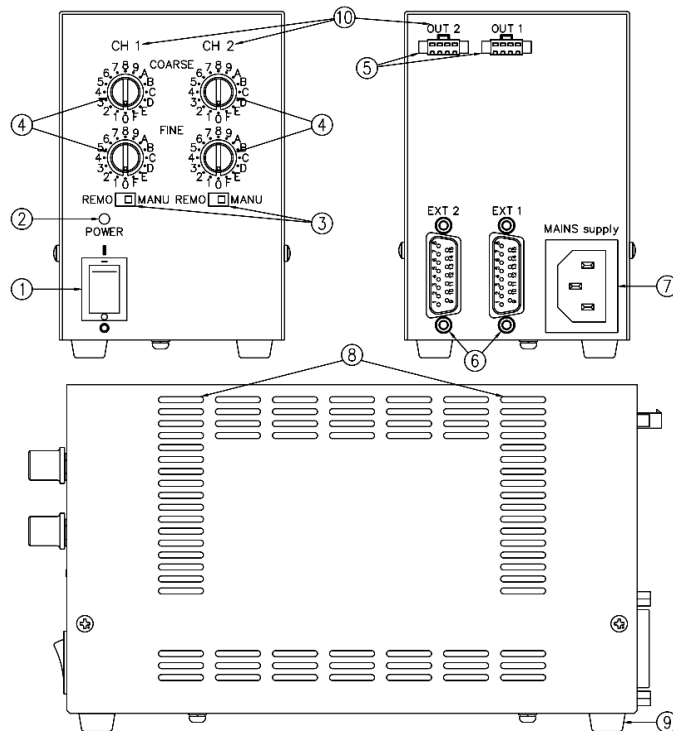


①	Power SW	Tilt to "I" side for turning on power.
②	Power Indicator	LED illuminates when power supply is ON.
③	MANU/REMO SW	Switch for selecting manual or remote control.
④	Output Control SW	Manual adjustment switch for output-control.
⑤	Connector for Illuminator: OUT1/2	Terminal for connection to the Illuminator.
⑥	External Signal Connector: EXT	Terminal for external control.
⑦	MAINS supply	Inlet for connecting power supply cable.
⑧	Air Hole	—
⑨	Rubber Feet	—
⑩	Indication of Channels	Indicates channel number for terminals below.

Installation

Install horizontally on the rubber feet at the bottom of the unit.

- ※ Install the unit in such a way, that adequate space is left free for ventilation. Keep space of at least 10mm around the main body.
- ※ Be sure to install the unit in such a way that the Power Switch can be operated easily and the Mains Plug can be pulled out without hindrance, in case of emergency.
- ※ Protection Class: Class I equipment.
- ※ Before using this product, please provide an appropriate power supply cord set conforming to the input power ratings and to the relevant standards of the area where you use this product.
- ※ The power supply cord set shall have following configurations:
Length: < 3 m; Conductors: L / N / PE; Class I type mains plug with reliable connection to the Protective Earthing Conductor of the Building Installation.
Optional Item MC-AC200A-2.0M does comply with these requirements.

4. Connections

	WARNING	<ul style="list-style-type: none"> • Only SELV circuits, which have reinforced insulation to their equipment primary circuit, may be connected to the unit. • For connection to the External Signal Connector, use a shielded cable with a recommended length of less than 2 m (Optional item: MC-EXC-02) • Please do not excessive input or overload.
---	----------------	---

External signal connector (EXT)


Model

Terminal of the Unit	Connector for the cable
HDAB-15P(05)(male) (made by HRS) Screws : M2.6	HDAB-15S(05) : connector(female) (made by HRS) HAD-CTH : connector (made by HRS) or its equivalent


Pin assignment

No	Identification	No	Identification
1	Input ON/OFF signal + ※1	9	EXT_VR (Volume control signal) ※3
2	Input ON/OFF signal - ※1	10	EXT_0-5V (Analog control signal) ※4
3	NC	11	EXT_GND
4	NC	12	EXT_0-5V / EXT_VR Selection input ※2
5	NC	13	DC2.5V Reference Voltage output ※3
6	NC	14	NC
7	NC	15	NC
8	NC		

- ※1 It is possible to input a voltage between 5V and 24V.
Input a voltage between 5V and 24V Output OFF
Input 0V or Input open Output ON
• Please do not change the input voltage during operation.
• Operation possible regardless from MANU/REMO selection.
• Input Current : 1mA (Input 5V), 6mA (Input 24V)
- ※2 Open-Collector type input or DC5V input are possible.
Input DC5V or Input open EXT_0-5V
Short GND EXT_VR
• Only for REMO Control
• Output current is 0.5mA at short to GND. (Pull up to DC5V with 10KΩ resistor.)
- ※3 Input to EXT_VR(9) conforms to only a signal of variable resistor of 10KΩ connected to 2.5 Vref(13P) and GND(11P).
• Input 0V (GND) : Min / Input 2.5V : Max
• Please do not use 2.5 Vref besides a designated usage.
- ※4 Circuited to GND with 10KΩ resistor.
• Input 0V(GND) : Min / Input 5V : Max

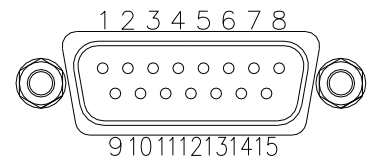

Example of input and output circuit

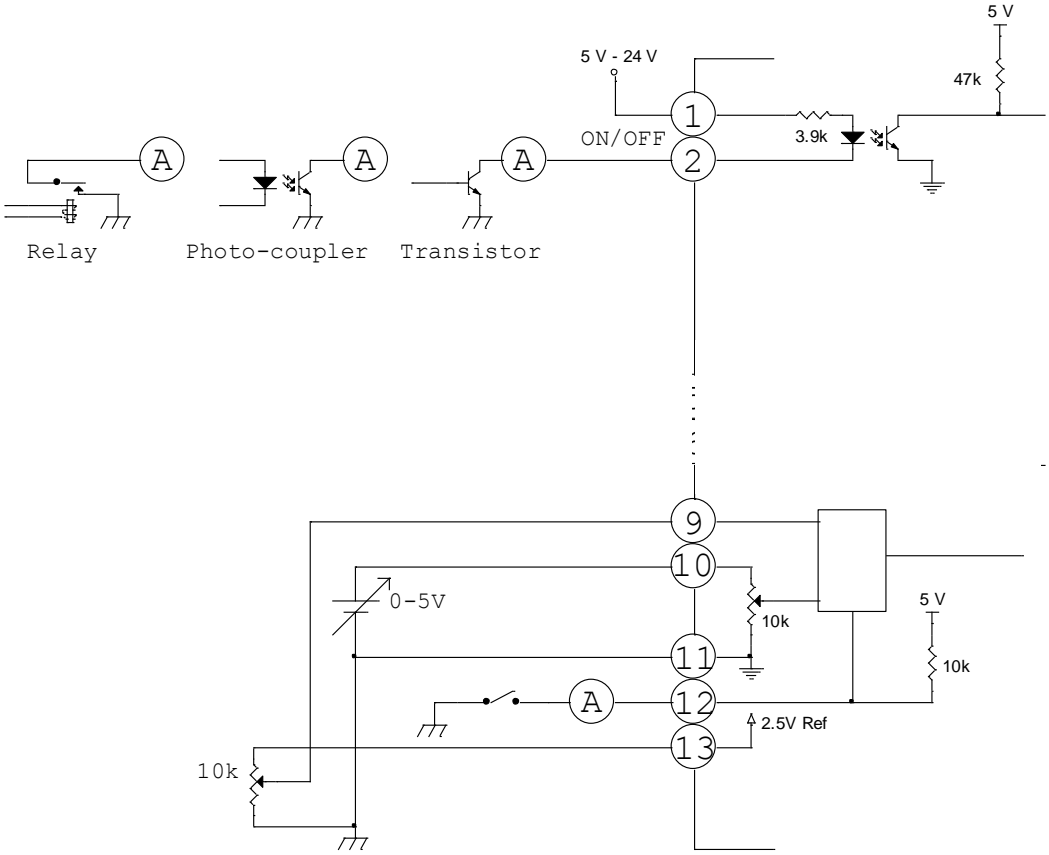

Connector for Illuminator (for MG-Wave Illuminator, Identical specification for each channel)

Model

Output Connector of the Unit	Connector of the Illuminator
SMP-04V-BC (made by JST)	SMR-04V-B (made by JST) or its equivalent

Pin assignment: Connector for Illuminator (OUT1, OUT2)

No	Function / Identification
1	Output Current (+) ※1
2	Sensor (+) ※2
3	Sensor (-) ※2
4	Output Current (-) ※1

※1 Maximum Output voltage is 12.5V.

※2 The Sensor has been preset for illuminators of the MG-Wave series (4pin type)

Please do not connect anything else than illuminators of the MG-Wave series (4pin type).

Optional item: M-RCB4 * * L

5. Maintenance



WARNING

- Please turn off the power switch and detach all connections before doing maintenance.
- Please never take the product apart.

- Please periodically wipe off any dirt by a dry cloth.
- If the contamination is worse, wipe it off with a cloth that has been lightly immersed in a weak solution of neutral detergent.

Troubleshooting: Before requesting repair, check the following items.

Symptom	Cause	Remedy
Illuminator does not turn on.	- Are all connectors correctly attached? - Is the MANU/REMO correctly set?	- Please attach connectors correctly. - Please set MANU/REMO correctly.
Illuminator remains dark.	- Is the output control correctly adjusted? - Are the external signals correctly set?	- Please adjust output control. - Please connect signals correctly.
Unit does not turn ON/OFF.	- Are the external signals correctly set?	- Please connect signals correctly.

6. Specifications

Model	MLEK-A120W2LR	
Input Voltage	AC100-240 [V] (TN-C power distribution system)	※1
Input Current	0.35/0.20 [A] (AC100/ 240 [V])	
Input Frequency	50/60 [Hz]	
Rushing Current	15 [A]max. at AC100 [V] 36 [A]max. at AC240 [V]	※2
Number of Outputs	2 channel (Each channel is controlled separately)	
Output Voltage	Max 12.5 [V]	
Output Current	1.2 [A]max. : Shared	
Output Control	Constant current control	
Output Characteristics	Continuous DC output	
Output Adjustment Function	Yes Manual / Remote (Channels are controlled separately)	
Output Range	0 – 100 [%]	
Remote Control	Yes (Channels are controlled separately) EXT0-5V / EXT VR (with changeover function) Output ON/OFF control	
Environment Conditions	Indoor use Altitude up to 2000m Temperature 0°C to 45°C Maximum 80%RH for temperatures up to 31°C decreasing linearly to 50%RH at 40°C MAINS supply voltage fluctuations up to ±10% of the nominal voltage Installation category II For use up to Pollution degree 2	
Storage	-20~85 [°C] / 20~85 [%RH] (non-condensing)	
Installation Method	Horizontal installation on rubber feet.	
Protection Class	Class I equipment	
Cooling Method	Air-cooling	
International Protection Degree	IP30 (EN60529)	※3
Dimensions	W75xH110xD190 (Protuberances excluded)	
Mass	Approximately 1.3 [kg]	
CE Marking	Low Voltage Directive : 2014/35/EU EMC Directive : 2014/30/EU RoHS Directive : 2011/65/EU, 2015/863	※4

※1 Please use power supply cord set satisfying the input AC voltage / current ratings of the unit and complying to the relevant standards / laws of the area where you use this product. (Please confirm a model of an attached power supply cord set to the product with the table of optional items.)

※2 Specification for cold-start

※3 An object equal to or more than a diameter of 2.5mm does not reach hazardous parts inside the unit. The unit is not protected against invasion of water.

※4 MLEK-A120W2LR and all Optional Items, except stated explicitly do comply to these European Standards upon which CE marking is declared. Additionally, please use a Class I power supply cord set which confirms to CE marking in order to conform the unit to CE marking.


(Optional Item MC-AC200A-2.0M does comply with CE marking.)

Optional Items

Name	Model	CE	O:Yes x:No
Relay cable for Illuminator (optional sales)	M-RCB * * L (Relay cable for 4pin connector) * *:length (01=1m, 02=2m, 03=3m)	※1	1m,2m:○ ※3 3m:×
AC200V Power Supply Cord (optional sales)	MC-AC200A-2.0M (Only 2m length available)	※2	○
External Connector & Cable (optional sales)	MC-EXC-02 (length:2m, output side unattached)	※1	○

※1 Please inquire to MORITEX about cable different in length.

※2

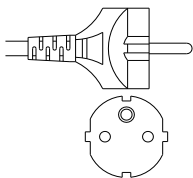

CE


up to A250V

Use a power cable that conforms to the standards of the country or region in which it will be used.




※3 An extension cable of 3m is not the adaptation of CE.

Dimensions

D-SUB Screws M2.6

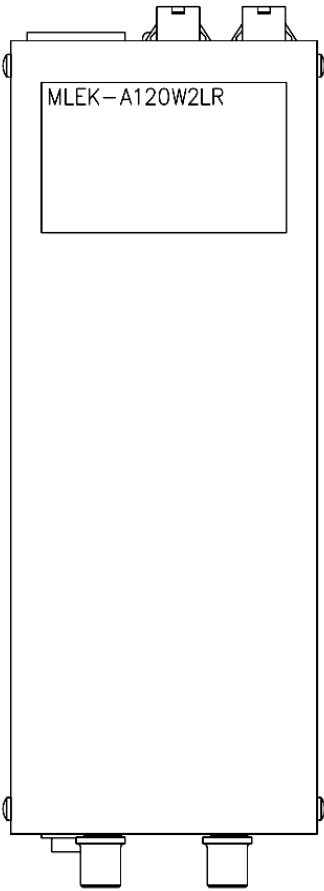


Screws fixing rubber feet M3
Permission depth 4mm

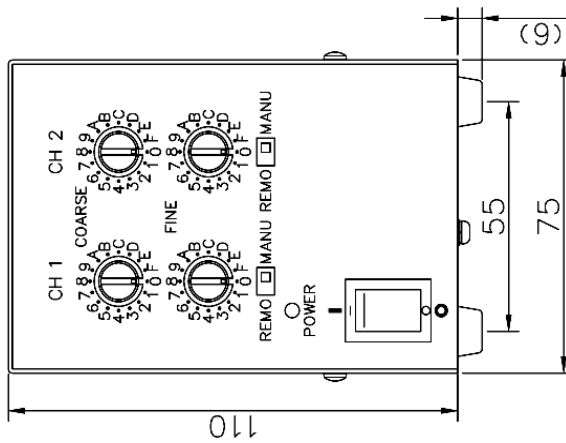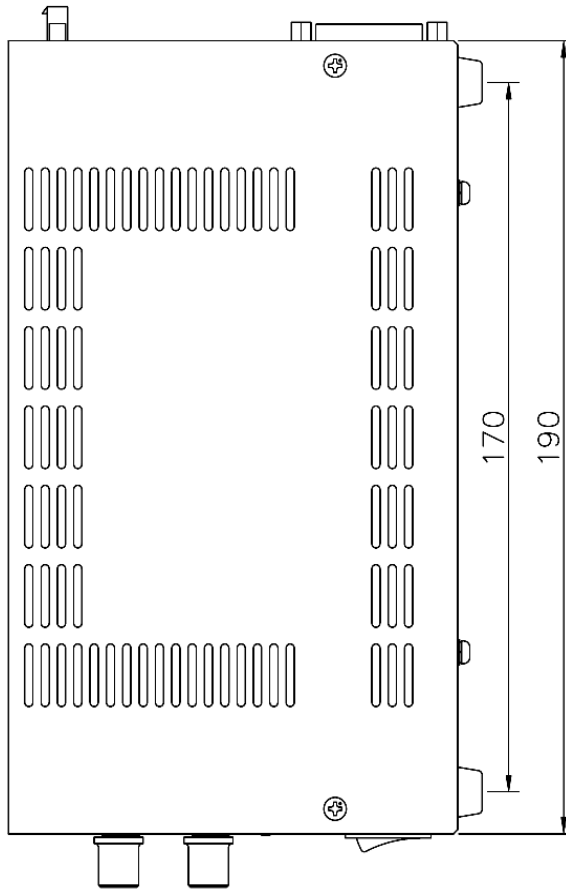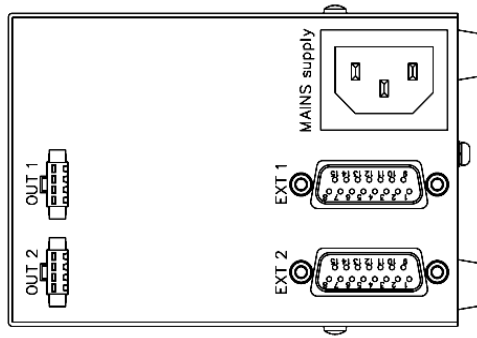

7. Others

1. Do not dispose equipment and/or parts of the equipment as unsorted municipal waste but collect them separately.
2. Before disposal of the equipment and/or parts of it, please contact MORITEX for any return or disposal methods/systems.
3. This symbol indicates separate collection of electrical and electronic equipment. Do not dispose equipment and/or parts of the equipment as unsorted municipal waste.

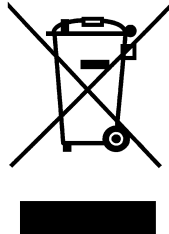

4. The equipment will be treated according to Directive 2012/19/EU (WEEE: Waste Electrical and Electronic Equipment). It is of highest importance to preserve, protect the quality of the environment, protect human health and to utilise natural resources prudently and rationally. Please be aware that it is also your responsibility to act in this sense, by disposing the equipment and/or parts of the equipment according to this Instruction Manual.

《Appendix》

- If there are any unclear points or if you have any questions, please feel free to inquire MORITEX.
For repair or after sales service, please contact any MORITEX office or the sales office where you have purchased the unit.
- Please provide following information when requesting service.

Model	:	MLEK-A120W2LR
Ser. No.	:	Indicated on the product
Date of purchase	:
State of trouble	:	Please provide detailed information
Your name (company name and/or individual name), address, telephone/FAX number, email-address		

お問い合わせは・・・

株式会社 モリテックス

国内営業部

〒351-0024 埼玉県朝霞市泉水 3-13-45

E-mail : moritex.mvs@moritex.com

URL : www.moritex.co.jp

TEL 048-218-2534 / FAX 048-462-6713

For inquiry, please contact to:

MORITEX Corporation

3-13-45, Senzui, Asaka-shi,

Saitama 351-0024

Japan

Phone : +81-(0)48-218-2525

Fax : +81-(0)48-462-6713

E-mail : moritex.sales@moritex.com

URL : www.moritex.co.jp

: www.moritex.com

MORITEX Technologies (Shenzhen) Co., Ltd.

No.20, Guiri Road, Daping Village,

Guanlan, Longhua New District,

Shenzhen, 518110

China

Phone : +86 (0)755-2798-8282

Fax : +86 (0)755-2798-8575

E-mail : sales.china@moritex.com

URL : www.moritex.com

MORITEX North America, Inc.

6862 Santa Teresa Blvd.

San Jose, CA 95119 USA

Phone : +1-(0)408-363-2100

Fax : +1-(0)408-363-9980

E-mail : machine.vision@moritex.com

URL : www.moritex.com

Moritex Asia Pacific Pte. Ltd.

60 Paya Lebar Road #06-31,

Singapore 409051

Phone : +65-(0)6898-0835

Fax : +65-(0)6898-0836

E-mail : sales.AP@moritex.com

URL : www.moritex.com

MORITEX Europe representative office

Mühlbachstr. 20 82229 Seefeld, Germany

E-mail : inf.eu@moritex.com

URL : www.moritex.com